

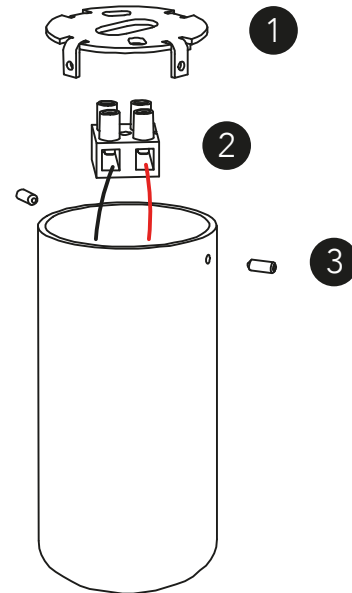
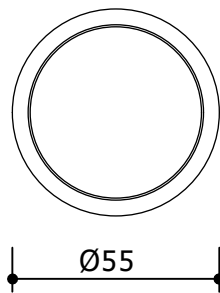


ASSEMBLY DOCTOR TOOL FIX


design dark studio for dark

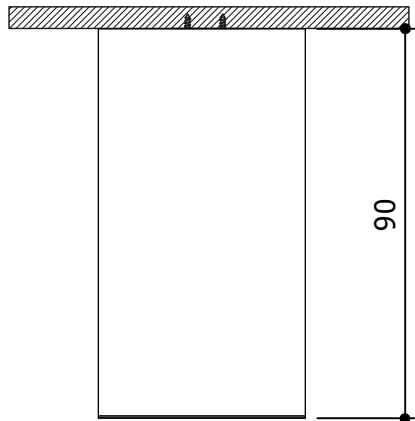


- 1 Mount the ceiling bracket with two screws onto the ceiling.
- 2 Connect to power supply.
- 3 Close ceiling base with two screws.
- 4 Put on the power.

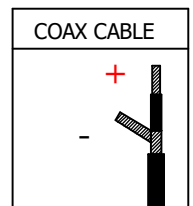

CONNECTION Standard version

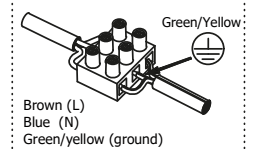

CONNECTION Dimmable version

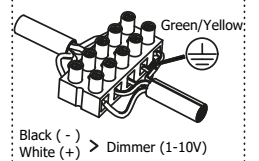

Alu



DARK®

© DARK 2021 / DARK has the right to change any technical data, dimensions, colors and characteristics without prior notice. All rights reserved.
Please always check the latest technical data sheet on www.dark.be.

DARK at night nv
Vliegplein 43 / 9991 Maldegem / Belgium
+32 50 71 81 40 / info@dark.be / www.dark.be