

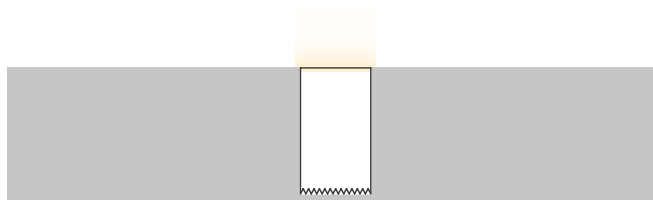


ASSEMBLY DOCTOR FLEX CONTOURO

design dark studio

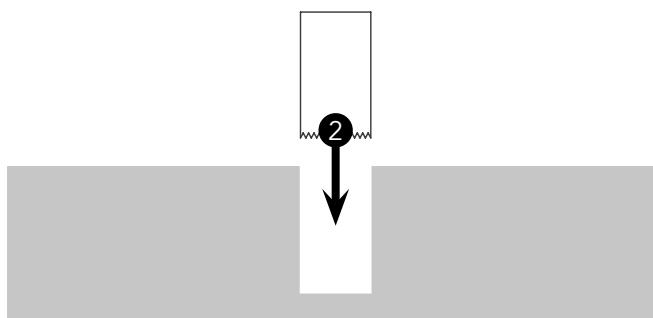

- 1 Cut a groove (7,7mm deep, 4,3mm wide)
- 2 Press the LED profile into the groove

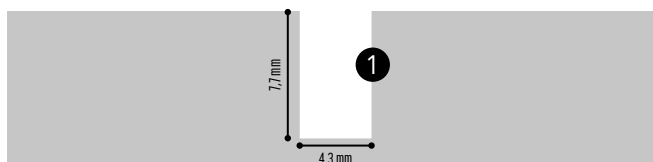