

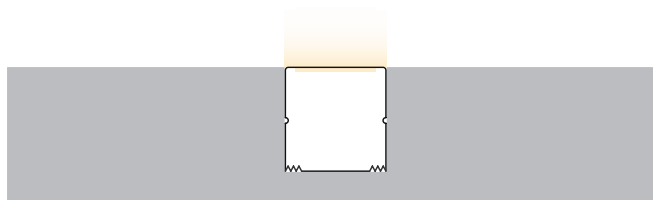


# ASSEMBLY DOCTOR FLEX CONTOURO

design dark studio

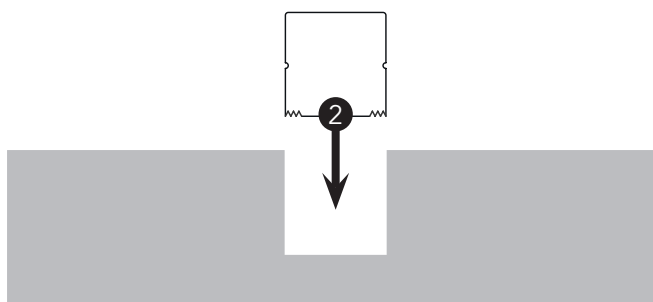

- 1 Cut a groove (6,2mm deep, 6,4mm wide)
- 2 Press the LED profile into the groove

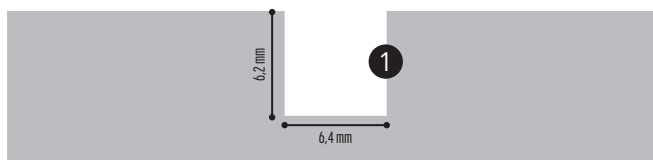